




CAUTION! Risk of injury due to crushing. Wear gloves!

UNMOUNTING




NOTE! For easier unmounting, it is recommended to unmount the plastic slide.

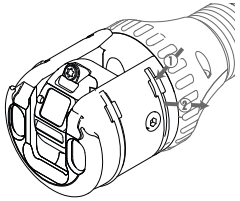

Insert a slotted screwdriver into the recess of the protective cover and with slight pressure under the retaining ring (1).

Lever the retaining rings backwards out of the recess using the screwdriver. It may be necessary to lever the retaining ring out at both recesses (2).

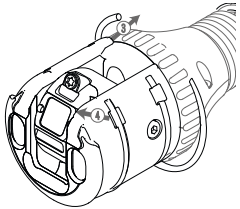

Slide the rear retaining ring into the gap between the protective cover and the protective cover and the push slide (3). Lever the front retaining ring forward over the camera head using a screwdriver (4). Pull the protective cover slightly apart and remove the cover from the camera head. Slide the rear retaining ring forward over the camera head.



NOTE! It is recommended to leave the screw in the camera to prevent dirt from entering the valve opening. Unmount the protective cover only for cleaning / pressurization of the camera or when the cover is worn. Before mounting the protective cover again, clean the camera head thoroughly with water.


- Clean the screw.
- Remove the screw.
- Perform the pressurization of the camera as described.

MOUNTING THE PROTECTIVE COVER PTP50


INITIAL MOUNTING



NOTE! Perform the initial mounting only with a cleaned camera. Only in this way the protective cover can be put on the camera with the retaining rings mounted. It is recommended to leave the protective cover mounted at all times and to unmount it only in case of thorough cleaning or pressurization of the camera.

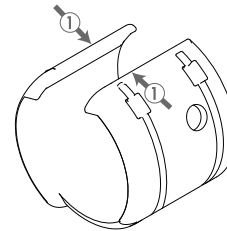


Slightly press the protective cover together (1).

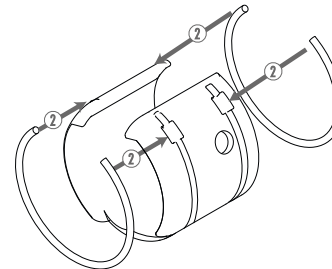


Slide the retaining rings over the protective cover and insert them into the provided recesses of the protective cover (2).




CAUTION! Risk of injury due to crushing. Wear gloves!

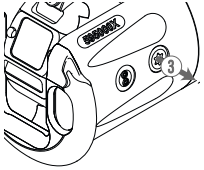

Unscrew the valve screw of the camera (3).

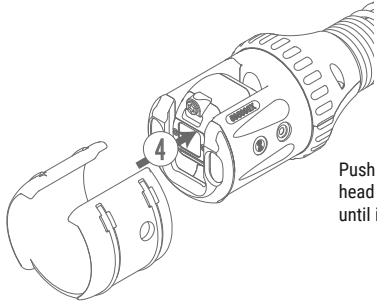

Push the protective cover over the camera head from the front with a little pressure until it snaps into place (4).

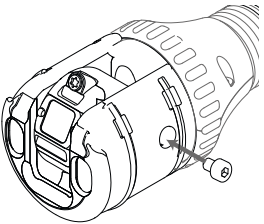


Screw in the supplied screw.
The screw protects the valve from dirt and secures the protective cover against twisting and sliding down.


WITH VALVE SCREW SCREWED IN



NOTE! A mounting with the screw screwed in and the retaining rings inserted is not possible. The shell cannot be pushed far enough apart. The protective cover must first be pushed over without retaining rings and then the retaining rings can be inserted.

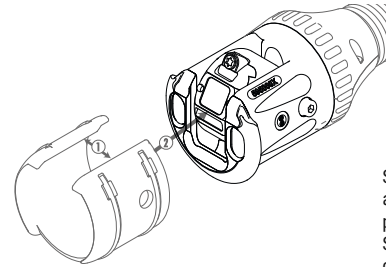

Slightly push the protective cover apart so that it can slip over the protruding screw head (1).
Slide the protective cover onto the camera from the front (2).

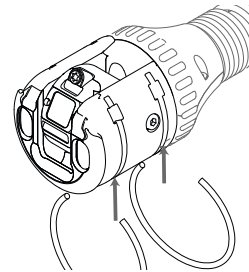

Secure the retaining rings by placing them with the opening against the recess and then by sliding them over the shell with firm pressure.