


# PTP50 PROPER CARE TIPS



## CLEAN BENEATH CAMERA COVER

Remove the protective cover regularly, as dirt collects underneath, which can reduce the service life of the housing. Simply pry off the retaining rings and then slide the cover from the camera head. Reverse the procedure to reinstall.

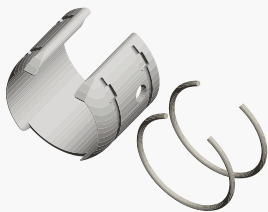

## PRO TIPS

Do not place a dirty and damp camera in the transport case, as this creates a humid environment in the case, which can reduce the service life of the camera housing.




Use only water for cleaning. Do not use cleaners with chemicals. Use brushes with soft bristles. Dry the PTP50 after cleaning. Keep the O-rings clean and grease them lightly with the O-ring grease supplied.



## CLEAN BENEATH REAR COVER

Remove push slide D54 from the rear of the PTP50 and clean.

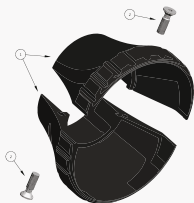

Do you need help?  
Please contact us:  
+49 8376 9218 678  
[www.ipek.at](http://www.ipek.at)

